

Set SMTP Settings On Bizhub C220/280/360

These instructions are for setting up SMTP via the MFP Control Panel

Log into the Administrator Settings

1. Press [**Utility/Counter**]
2. Touch [**Administrator Settings**]
3. Enter the admin password (12345678 is default) and touch [**OK**]

Enter network and email smtp settings

4. Touch [**Network Settings**]
5. Touch [**Email Settings**]
6. Touch [**Email TX(SMTP)**]
7. Touch **Forward** -> once (page 2/6)
 - a. Touch [**Host Address**]
 - b. Select either **Host Name or IPV4**
 - c. Enter the SMTP host information (HostName or IP address)
 - d. Touch [**OK**]
8. Touch **Forward**-> three times (page 5/6)
 - a. Select **SSL, TLS or OFF**
 - b. To change the port number, touch [**Input**] enter the desired number and touch enter
 - c. To change the SSL port number, touch [**Input**] enter the desired number and touch enter
9. Touch [**Detail Setting**]
 - a. Select **Authentication off** if SMTP server does not require authentication
 - b. Select **Authentication On** if SMTP server does require authentication
 - i. Enter the user ID
 - ii. Enter the Password
 - iii. Touch OK
 - c. Touch OK
10. Press the yellow reset button